

IMPORTED SAFETY INFORMATION

- This user guide contains important product operating instructions, safety and maintenance information
- Please read this user guide before use

 Keep away from fire  Not for outdoor use

 Keep away from water

CARE AND MAINTENANCE

- The product is to be used and stored a room temperature (-5°C to 40°C, not exceeding an average of more than 25°(in any 24 hours period)
- Keep the device dry.
- Do not store the product in dirty, dusty areas.
- Do not expose the product to rough handling
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean.
- Disengage the product from the track when not in use

Please read through this guide before using the adaptor. Any damage resulting from improper usage of the product will not be covered by our Product Warranty

NEXEN SERIES ADAPTOR SPECIFICATIONS

Parameter	Nexen Series
Rated Voltage	250VAC
Rated Current	13 Amp
Frequency	50Hz / 60Hz
Size (Dia x Depth)	67 X 43mm
Weight	82 grams
Degree of Protection	Ordinary
Warranty	3 Year, subject to *Warranty T&C*

Visit www.nexenlife.com to find out more on our Product Warranty T&C

NEXEN


EVERYDAY ELEVATED

ADAPTOR MANUAL


NEXEN Adaptor- Switch On Guide



1 Align the adaptor's rotary axis to insert into the middle groove part of the track.

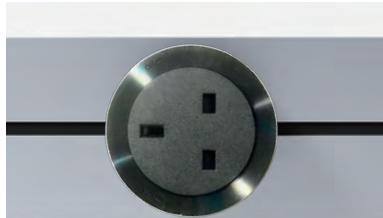

2 Insert the adaptor to the bottom of the power track. At the 9'o Clock Direction, the adaptor is turned "**OFF**".

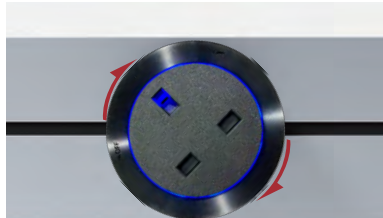

3 Turn the adaptor fully 90 degrees clockwise to the 12'o Clock Direction until you hear the "**Click**" sound




4 At the 12'o Clock Direction, the adaptor is turned "**ON**".

NEXEN Adaptor- Switch Off Guide




1

At the 12'o Clock Direction, the adaptor is turned **"ON"**

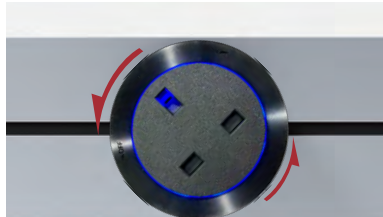

2


Turn the adaptor fully 90 degrees anti-clockwise to the 9'o Clock Direction until you hear the **"Click"** sound

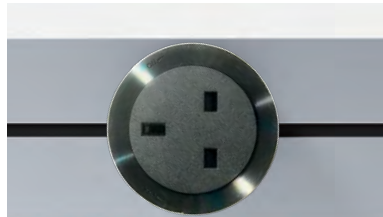

3

At the 9'o Clock Direction, the adaptor is turned **"OFF"**

NEXEN Adaptor- Slide Left/Right Guide

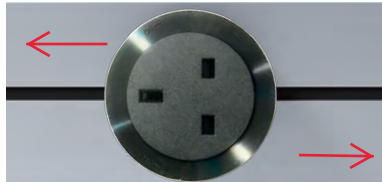

4

When the adaptor is turned fully at the 9'o'Clock direction, you can slide the adaptor to the **left** or **right**

NEXEN Adaptor- Sliding Guide



1 When the adaptor is turned fully at the 12'o Clock direction, the adaptor is locked and cannot be slide to the left or right of the e-Bar



2 When the adaptor is turned partially at the 10 to 11' o Clock direction, the adaptor is still locked. Please note **NOT TO** slide the adaptor left or right.



3 Turn the adaptor fully to the 9'o Clock direction




4 When the adaptor is turned fully at the 9'o'Clock direction, you can slide the adaptor to the left or right.

NEXEN Adaptor- Standby Guide



1 At the 12'o Clock Direction, the adaptor is turned "ON"

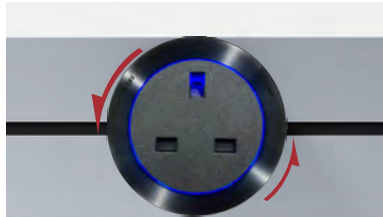

2 To put the adaptor in standby mode, turn the adaptor slightly anti-clockwise until the 10 to 11'o Clock Direction



3 At the 10 to 11'o Clock Direction, electricity is cut off and the adaptor is in standby mode



4 At the "Standby" mode, the adaptor is locked and cannot be pulled out from the power track