

# IMPORTED SAFETY INFORMATION

- This user guide contains important product operating instructions, safety and maintenance information
- Please read this user guide before use

 Keep away from fire  Not for outdoor use

 Keep away from water

## CARE AND MAINTENANCE

- The product is to be used and stored a room temperature (-5°C to 40°C, not exceeding an average of more than 25°(in any 24 hours period)
- Keep the device dry.
- Do not store the product in dirty, dusty areas.
- Do not expose the product to rough handling
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean.
- Disengage the product from the track when not in use

**\*Please read through this guide before using the adaptor. Any damage resulting from improper usage of the product will not be covered by our Product Warranty\***

## NEXEN SERIES ADAPTOR SPECIFICATIONS

Parameter	Nexen Series
Rated Voltage	250VAC
Rated Current	13 Amp
Frequency	50Hz/ 60Hz
Size (Dia x Depth)	67 X 43mm
Weight	82 grams
Degree of Protection	Ordinary
Warranty	3 Year, subject to *Warranty T&C*

**\*Visit [www.nexenlife.com](http://www.nexenlife.com) to find out more on our Product Warranty T&C\***

# NEXEN

EVERYDAY ELEVATED

## ADAPTOR MANUAL


## NEXEN Adaptor- Switch ON Guide



**1** Align the adaptor's rotary axis to insert into the middle groove part of the track.



**2** Insert the adaptor to the bottom of the power track. At the 9'o Clock Direction, the adaptor is turned "**OFF**".

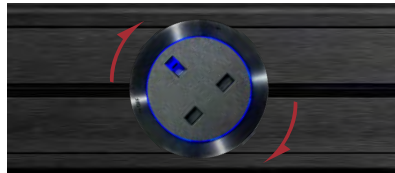

**3** Turn the adaptor fully 90 degrees clockwise to the 12'o Clock Direction until you hear the "**Click**" sound




**4** Ensure that the Earth Hole of the adaptor is facing the upwards portion of the Nexen Logo to ensure it is facing upright when plugged in.

## NEXEN Adaptor- Switch Off Guide




1

At the 12'o Clock Direction, the adaptor is turned **"ON"**

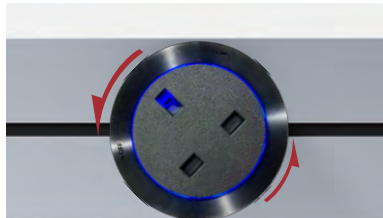

2


Turn the adaptor fully 90 degrees anti-clockwise to the 9'o Clock Direction until you hear the **"Click"** sound

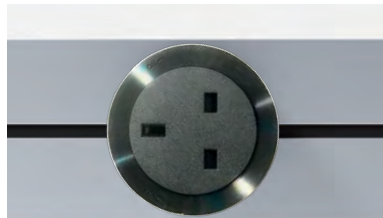

3

At the 9'o Clock Direction, the adaptor is turned **"OFF"**

## NEXEN Adaptor- Slide Left/Right Guide

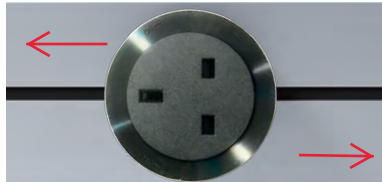

4

When the adaptor is turned fully at the 9'o'Clock direction, you can slide the adaptor to the **left** or **right**

## NEXEN Adaptor- Sliding Guide



**1** When the adaptor is turned fully at the 12'o Clock direction, the adaptor is locked and cannot be slide to the left or right of the e-Bar



**2** When the adaptor is turned partially at the 10 to 11' o Clock direction, the adaptor is still locked. Please note **NOT TO** slide the adaptor left or right.



**3** Turn the adaptor fully to the 9'o Clock direction




**4** When the adaptor is turned fully at the 9'o'Clock direction, you can slide the adaptor to the left or right.

## NEXEN Adaptor- Standby Guide



**1** At the 12'o Clock Direction, the adaptor is turned "ON"

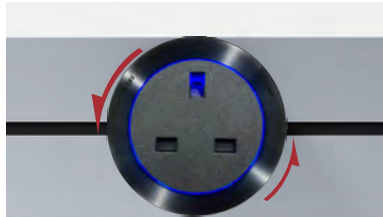

**2** To put the adaptor in standby mode, turn the adaptor slightly anti-clockwise until the 10 to 11'o Clock Direction



**3** At the 10 to 11'o Clock Direction, electricity is cut off and the adaptor is in standby mode



**4** At the "Standby" mode, the adaptor is locked and cannot be pulled out from the power track