

NEXEN

SMART 65W ADAPTOR INDEPTH SETUP GUIDE




EVERYDAY ELEVATED






HOW TO SETUP SMARTLIFE APP


NEXEN 65W SMART ADAPTOR

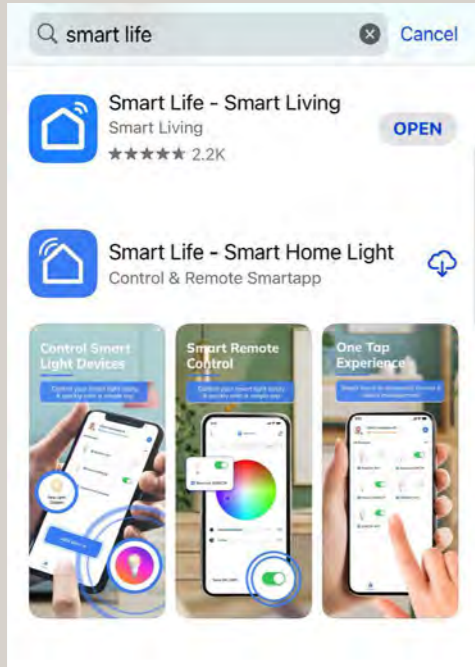


1 Download the **Smartlife** App from Google Play Apps or from the Apple App Store

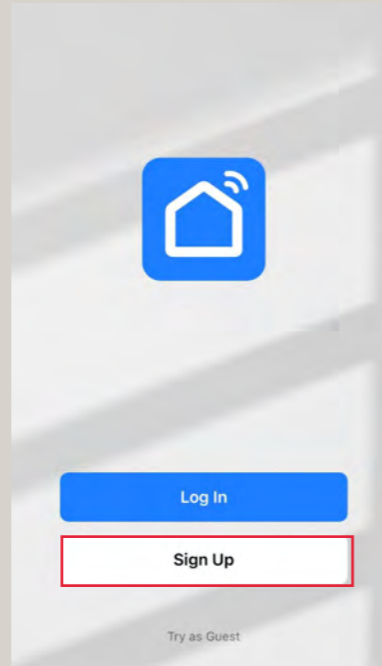

2 Sign up for an account in the Smart Life App

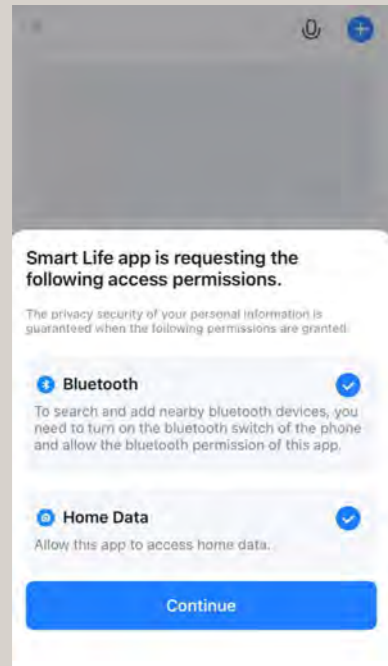

3 Give permission for the Smart Life App to access your Bluetooth and Home Data

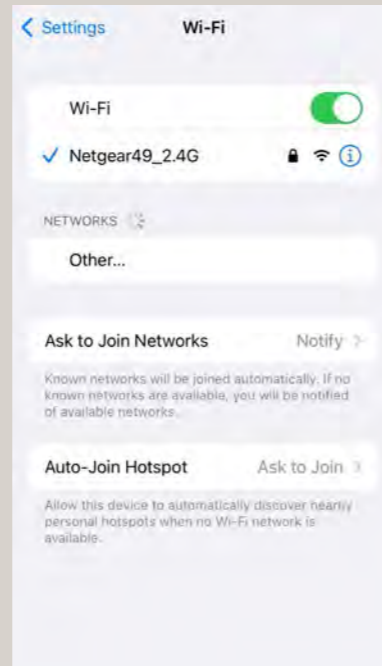

4 Make sure your mobile phone is connected only to the 2.4 GHz Wifi Connection




HOW TO SETUP SMARTLIFE APP


NEXEN 65W SMART ADAPTOR




5 When the 65W Smart adaptor is initially activated "ON", it is not connected to the 2.4 GHz Wifi Network, hence the adaptor LED Light will be white in color to show that it is in unpaired mode.

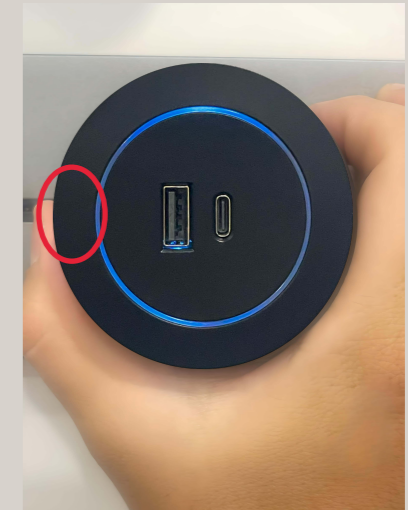

6 Press and hold the button on the left side of the 65W Smart Adaptor for 5 seconds to activate the adaptor in pairing mode and the LED light will start blinking while showing a light blue color

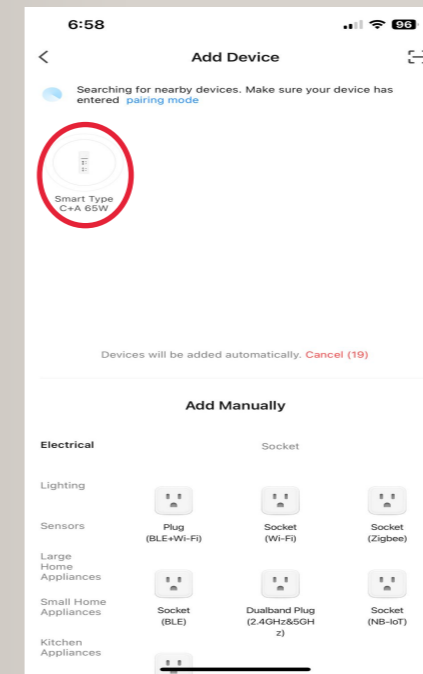


7 Once the adaptor is in pairing mode, the Discovering devices window will **show Smart Type C+A 65W. Click on the device**

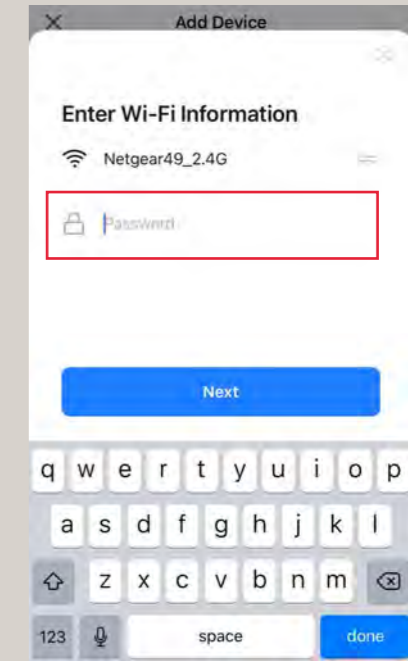


8 You will need to enter your 2.4GHz Wifi Connection Password

HOW TO SETUP SMARTLIFE APP

NEXEN 65W SMART ADAPTOR

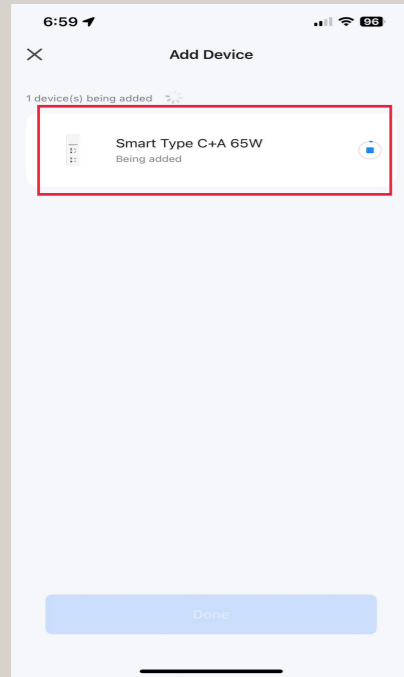


9 The "Add Device" window with the progress bar will pop-up

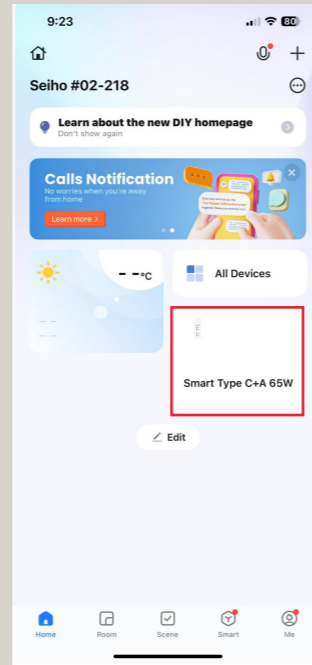

10 Once device is added, it will appear in your Home Screen. Click on the device to edit it.




11 In the main display menu, you can see the individual Type A and C USB Ports reflected

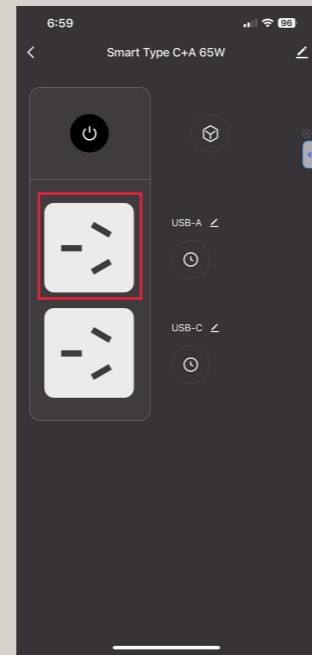


12 To individually Activate ON/OFF each USB port, simply click on each port as reflected.

HOW TO SETUP SMARTLIFE APP


NEXEN 65W SMART ADAPTOR

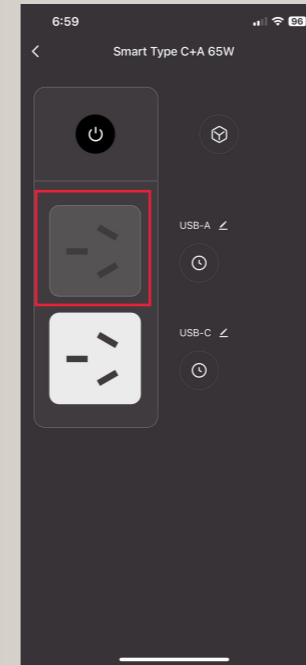

13 By clicking on the USB A Port, it is activated OFF with the 1st click and ON with the consecutive click and so on and so forth.

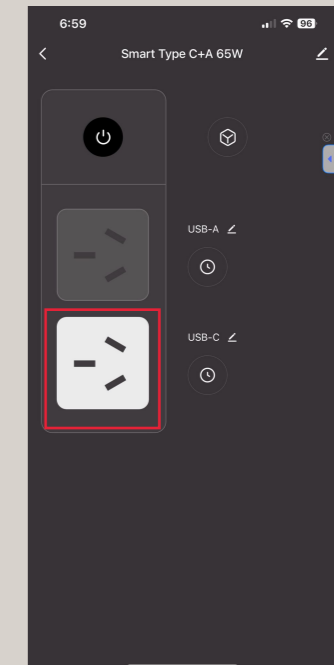

14 By clicking on the USB C Port, it is activated OFF with the 1st click and ON with the consecutive click and so on and so forth.

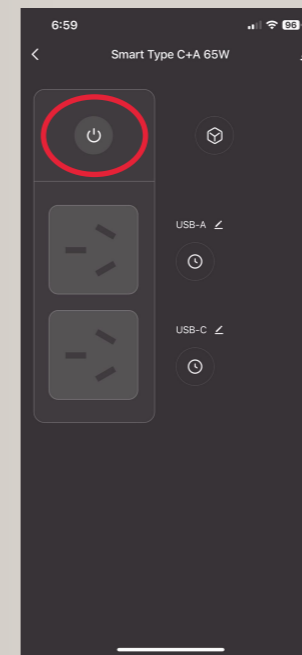


15 In the main display menu, you will also see the Power ON button which you can also use to Activate **On** or **Off** your Nexen 65W smart adaptor using 2.4GHz Wi-Fi



16 Switching off both USB A and C Ports will automatically Activate Off the 65W smart adaptor

IMPORTED SAFETY INFORMATION

- This user guide contains important product operating instructions, safety and maintenance information
- Please read this user guide before use

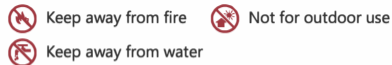

CARE AND MAINTENANCE

- The product is to be used and stored a room temperature (-5°C to 40°C, not exceeding an average of more than 25°(in any 24 hours period)
- Keep the device dry.
- Do not store the product in dirty, dusty areas.
- Do not expose the product to rough handling
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean.
- Disengage the product from the track when not in use

Please read through this guide before using the adaptor. Any damage resulting from improper usage of the product will not be covered by our Product Warranty

NEXEN SERIES ADAPTOR SPECIFICATIONS

Parameter	Nexen Series
Rated Voltage	250VAC
Rated Current	13 Amp
Electrical Rating	100-250VAC,50/60Hz,Max 65W
Size (Dia x Depth)	67 X 52mm
Weight	120 grams
Degree of Protection	Ordinary
Warranty	3 Year, subject to Warranty T C

Visit www.nexenlife.com to find out more on our Product Warranty T&C

NEXEN

EVERYDAY ELEVATED

SMART 65W ADAPTOR USER MANUAL

Nexen 65W Smart Adaptor needs to be connected to the 2.4GHz Wi-Fi network before reading this manual

NEXEN 65W Adaptor- Switch ON Guide



1 Align the adaptor's rotary axis to insert into the middle groove part of the track.



2 Insert the adaptor to the bottom of the power track. At the 9'o Clock Direction, the adaptor is turned "**OFF**".



3 Turn the adaptor fully 90 degrees clockwise to the 12'o Clock Direction until you hear the "**Click**" sound



4 Ensure that the Type A Port of the adaptor is on the left and facing the upwards portion of the Nexen Logo to ensure it is facing upright when plugged in.

NEXEN 65W Adaptor- Switch On Guide



1 Align the adaptor's rotary axis to insert into the middle groove part of the track.



2 Insert the adaptor to the bottom of the power track. At the 9'o Clock Direction, the adaptor is turned "**OFF**".



3 Turn the adaptor fully 90 degrees clockwise to the 12'o Clock Direction until you hear the "**Click**" sound




4 At the 12'o Clock Direction, the adaptor is turned "**ON**".

NEXEN 65W Adaptor- Switch Off Guide



1

At the 12'o Clock Direction,
the adaptor is turned **"ON"**

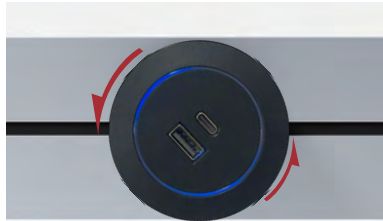

2

Turn the adaptor fully 90
degrees anti-clockwise
to the 9'o Clock
Direction until you hear
the **"Click"** sound



3

At the 9'o Clock
Direction, the adaptor is
turned **"OFF"**

NEXEN Adaptor- Slide Left/Right Guide



4

When the adaptor is turned
fully at the 9'o'Clock
direction, you can slide the
adaptor to the **left** or **right**

NEXEN 65W Adaptor- Sliding Guide



1 When the adaptor is turned fully at the 12'o Clock direction, the adaptor is locked and cannot be slide to the left or right of the e-Bar



2 When the adaptor is turned partially at the 10 to 11' o Clock direction, the adaptor is still locked. Please note **NOT TO** slide the adaptor left or right.



3 Turn the adaptor fully to the 9'o Clock direction




4 When the adaptor is turned fully at the 9'o'Clock direction, you can slide the adaptor to the left or right.

NEXEN 65W Adaptor- Standby Guide



1

At the 12'o Clock Direction, the adaptor is turned "ON"

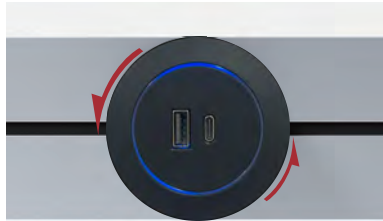

2

To put the adaptor in standby mode, turn the adaptor slightly anti-clockwise until the 10 to 11'o Clock Direction



3

At the 10 to 11'o Clock Direction, electricity is cut off and the adaptor is in standby mode



4

At the "Standby" mode, the adaptor is locked and cannot be pulled out from the power track

